


Fieldpiece

Dual Temperature Meter

OPERATOR'S MANUAL

Model ST4

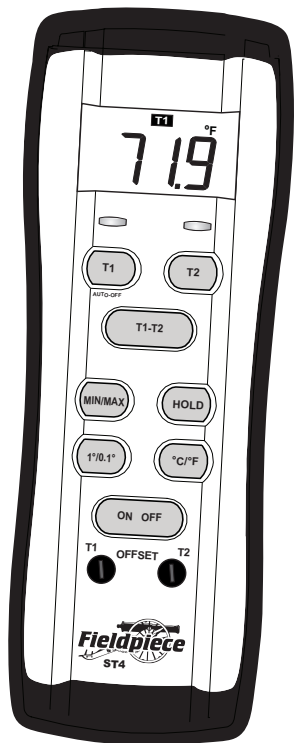

Quick Start

- 1 Install the 9V battery.
- 2 Press ON OFF for 1 second to power on.
- 3 Plug 2 Type K thermocouples into the top.
- 4 Press T1, T2, or T1-T2 to select display mode.
- 5 Read temperature directly on the display.

Certifications



EN61326-1, CE-EMC



RCM



WEEE



RoHS Compliant

WARNING

To avoid electrical shock, do not use this instrument when voltages at the measurement surface exceed 24VAC or 60VDC.

To avoid electrical shock, disconnect thermocouples from the ST4 before opening case or battery cover.


To avoid damage or burns, do not take temperature measurements in microwave ovens.

When testing hot temperatures, the thermocouple and velcro may become hot. Do not handle the thermocouple or the velcro when hot.

Description

The ST4 Dual Temp Digital Thermometer is ruggedized for field use and simple to use. The rubber boot protects against drop impacts and is comfortable to hold.

Plug in 2 Type K thermocouples and see the calculated difference in real time. Each thermocouple jack has its own offset pot for accurate calibration. Use the ST4 in the included clear case for added protection and easy viewing with magnet.

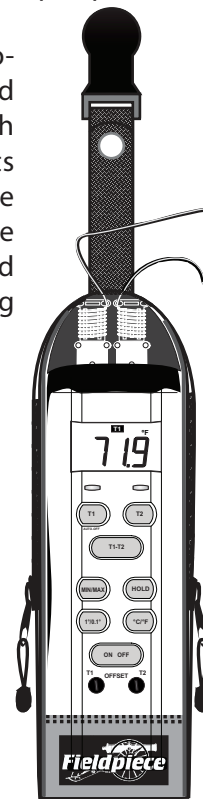

Indicators



HOLD

MAX

MIN

T1

T2

T1-T2

°F

°C

Battery

LED shines Red when a required thermocouple for selected display mode is not connected.
Displaying held measurement.
Displaying maximum measurement.
Displaying minimum measurement.
Displaying T1 thermocouple measurement.
Displaying T2 thermocouple measurement.
Displaying T1-T2 real time calculation.
Displaying temperature in Fahrenheit.
Displaying temperature in Celsius.
Battery needs to be replaced.

Controls

T1

Select T1 as thermocouple to display.

T2

Select T2 as thermocouple to display.

T1-T2

Select real time T1-T2 to display.

MIN/MAX

Display minimum or maximum captured measurement. Press and hold to clear.

HOLD

Hold measurement.

1°/0.1°

Select resolution: 1° or 0.1°

°C/°F

Select temperature scale: °C or °F

ON OFF

Power ON or power OFF.

T1


Adjust calibration offset of T1 Type K jack.

T2

Adjust calibration offset of T2 Type K jack.

Maintenance

CLEANING: Clean the exterior with a damp cloth. Do not use detergents or solvents.

BATTERIES: The 9V battery must be replaced when the low battery icon  is displayed. Pull off the rubber boot, unscrew the battery cover, and replace the old battery.

FIELD CALIBRATION: Calibration should be performed regularly for the highest accuracy. The calibration is offsetting the temperature for that jack for that particular thermocouple.

- 1 Stabilize distilled ice water.
- 2 Immerse the bead of the T1 thermocouple.
- 3 Select T1.
- 4 Use the T1 calibration pot to dial in 32.0°F.
- 5 Repeat for T2.

Specifications

Specifications good in ambient conditions of 73°F ±9°F (23°C ±5°C), <75% relative humidity

Display: 3.5 digit LCD, 2000 count

Over range: "OL" or "-OL" is displayed

Range: -58 to 2000°F (-50 to 1300°C)

Resolution: 0.1°

Accuracy:

±4°F @ -58 to 32°F

±(0.3%rdg +2°F) @ 32 to 1100°F

±(0.5%rdg +2°F) @ 1100 to 2000°F;

±2°C @ -50 to 0°C

±(0.3%rdg +1°C) @ 0 to 600°C

±(0.5%rdg +1°C) @ 600 to 1300°C

Accuracy after field calibration:

±1°F @ 30 to 120°F, ±6°F @ 0 to 50°F

Temperature coefficient:

0.1 x (specified accuracy) per °C (0 to 18°C, 28 to 50°C)

Measurement rate: 2.5 readings/second

Battery type: 9V, NEDA 1604, JIS 006P, IEC 6F22

Battery life: 200 hours typical alkaline.

 is displayed when the battery needs to be replaced.

Operating environment: 32°F to 122°F (0°C to 50°C) at <75% RH

Storage temperature: -4°F to 140°F (-20°C to 60°C), 0 to 80% RH (with battery removed)

Limited Warranty

This meter is warranted against defects in material or workmanship for one year from date of purchase from an authorized Fieldpiece dealer. Fieldpiece will replace or repair the defective unit, at its option, subject to verification of the defect.

This warranty does not apply to defects resulting from abuse, neglect, accident, unauthorized repair, alteration, or unreasonable use of the instrument.

Any implied warranties arising from the sale of a Fieldpiece product, including but not limited to implied warranties of merchantability and fitness for a particular purpose, are limited to the above. Fieldpiece shall not be liable for loss of use of the instrument or other incidental or consequential damages, expenses, or economic loss, or for any claim of such damage, expenses, or economic loss.

State laws vary. The above limitations or exclusions may not apply to you.

Obtaining Service

Visit www.fieldpiece.com/rma for the latest information on how to obtain service.

Fieldpiece

Designed in USA
MADE IN TAIWAN

www.fieldpiece.com

© Fieldpiece Instruments, Inc 2017; v10

More Fieldpiece

There's always something new coming from Fieldpiece Instruments. Find the latest news and updates at www.fieldpiece.com



SMAN460 4 Port Wireless
Manifold and Micron Gauge



SC260 True RMS
Compact Clamp
Meter

SC660 True RMS Wireless
Swivel Clamp Meter